



GB Instruction for use  
EE Kasutusjuhend



POWERTEX Chain Block model PCB-S1


## POWERTEX Chain Block PCB-S1 0.25 – 10 tonnes Instruction for use (GB) (Original instructions)

Read through these user instructions carefully before using the chain block. Improper operation may lead to hazardous situations!

### General safety provisions

- Check the function of the chain block before use. See “Daily checks” on page 3.
- Full function of the brake system can only be secured at a minimum load of 30 kg for capacities (WLL) up to 1 ton, and for capacities (WLL) above 1 ton, the minimum load to be greater than 3% of the rated capacity (WLL).
- Do not exceed the maximum load.
- Handle the chain block with care. Do not throw the block about or let it fall to the ground.
- Do not use the chain block for welding work where it is exposed to welding spatter or current.
- The chain block must not be used for lifting persons.

### Technical data

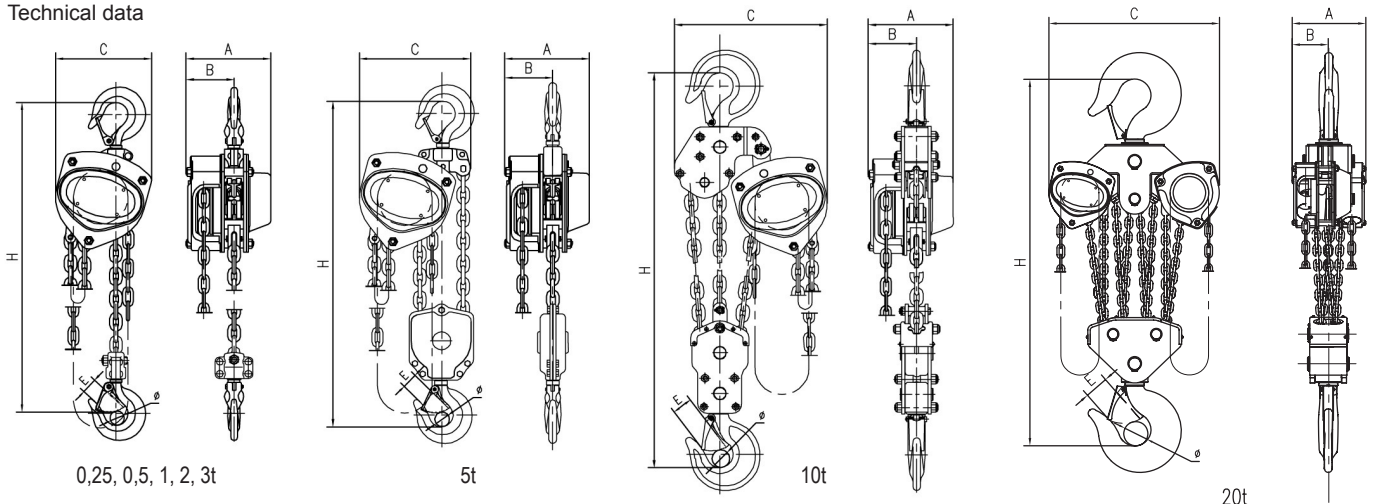

Model	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
Max. Load tonnes	0,25	0,5	1	2	3	5	10	20	
Standard lifting height *) m	3	3	3	3	3	3	3	3	3
Number of block falls	1	1	1	1	1	2	3	8	
Pull on hand chain daN (kp)	19	21	29	36	41	40	46	2x40	
Load chain	4x12	5x15	6,3x19	8x24	10x30	9x27	10x30	9x27	
Dimension A mm	106	128	142	175	195	183	195	183	
Dimension B mm	68	75	76	88	95	90	95	90	
Dimension C mm	108	130	150	185	226	255	355	577	
Dimension Ø mm	18	20	25	33	36	43	44	110	
Dimension E mm	20	22	26	35	37	44	47	70	
Dimension H min. mm	280	330	360	470	560	690	810	1.060	
Weight for standard lift height kg	6,4	8,9	12	19,5	29,4	36,6	64,1	185	

\*) Length of hand chain varies according to lifting height.

Safety factor : 4:1.

Static test coefficient: WLL x 1,5.

Generally according to EN 13157.

### Function

The load hook is raised or lowered by pulling on the hand chain. The load will remain where it is even when the hand chain is released because of the effective reaction brake.

### Suspension of chain block

Suspend the block from an eye, shackle, girder trolley etc. with sufficient load capacity. With the chain tightened, both hooks must be vertically aligned.



**NB!** No bending stresses may be applied to block, hooks or load chain.

### Raising/lowering

Only use straps and slings of sufficient load capacity. Check that the load is not anchored to the floor/ground or is otherwise fixed before making the lift. Ensure that the load chain hangs vertically and has no kinks. The hand chain must also be in good condition and easily accessible. The load is raised or lowered by pulling the hand chain in either direction.

### Warning:

- Only hand power from a single person is permitted on the hand chain. If the chain feels too heavy, use a bigger chain block or reduce the load.
- Make sure no-one stands beneath a hanging load.
- Do not step onto a hanging load.
- Do not raise or lower so far that the load hook hits the block housing.
- The chain block must not be used for pulling loads.
- The block must not be subjected to dynamic stresses, for example where a load connected to the block is launched from a height.
- Do not leave a block with a suspended load unattended.




**Attachment of loads**


Check the equipment before use. Improper attachment of loads can be highly dangerous (see Figs. 2 a – 2 e).




**Fig 2 a**  
The sling is applying load to the hook tip

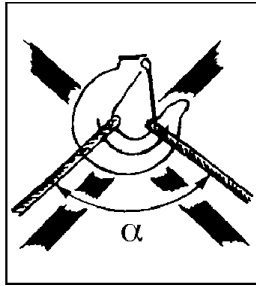


**Fig 2 b**  
Excessive top angle on sling!  
 $\alpha$  max 60°

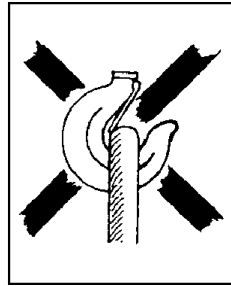

**Fig 2 c**  
Hook latch obstructed

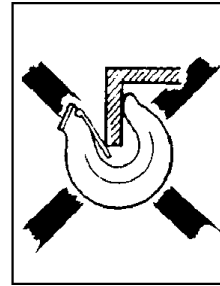

**Fig 2 d**  
Hook tip subject to additional bending stress

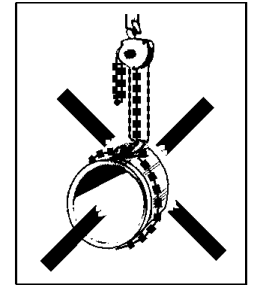

**Fig 2 e**  
Load chain must not be used as a sling

**Multiple lifting**

Multiple lifting presents special risks. This is when two or perhaps more hoists are used simultaneously for the same load. Danger to persons and material damage can arise due to dynamic stresses and uneven load distribution causing individual hoists to become overloaded. A competent person with experience in multiple lifting must therefore supervise this type of lifting tasks.

The total weight of the target object and its load distribution must be known or calculated.

For a variety of reasons, the centre of gravity can be difficult to determine, and thus so will the distribution of the load each hoist must bear. In cases where heavy, bulky loads must be handled and it is not possible to estimate all factors correctly, the max working load limit (WLL) of each hoist must be reduced by at least 25%.

**Daily checks**

After every working day on which the chain block has been used, the following should be checked:

- Is the chain block deformed or otherwise damaged? Are any parts missing?
- Is any deformation or other damage visible on the suspension device (eye, shackle, bolt, trolley etc.)?
- Are the hooks intact or have any hooks opened? Are the hook latches correct and functional?
- Wipe down the chain block and oil the load chain as required.
- The load chain must be undamaged, i.e. no signs of wear and no deformed or otherwise damaged links.
- The load chain must not be kinked or twisted. With two-fall or multi-fall chain blocks there is a risk of the chain twisting if the bottom hook assembly ends up looped through the chain sling – usually during refitting or moving the chain block between work stations. See Fig 3.
- The hand chain must also be in good condition.
- The brake function must be intact.

In the event of faults or failures, the block must be repaired and carefully checked by a specialist before reuse.

**Continuous maintenance - lubrication**

Oil the hook latches and bearings. Grease the pawl and ratchet and also the gear. Lubrication must be sparingly and carefully applied so no grease gets on the brake disk. Oil the load chain for longer life.

**Periodic checks**

Periodic checks are normally carried out yearly to detect and remedy any faults. If required (e.g. high frequency of use), more frequent checks may be carried out. See "Checklist for periodic checks". Measure hooks and chain to detect any changes in shape.


**Checks on load hook** (see Fig. 4 and Table 1)

Opening dimension I on the hooks is important. A hook with too large a maximum dimension has been exposed to overloading or overheating. It therefore does not have the necessary load capacity. The hooks may also have been exposed to long-term wear (dimension K).


Hooks must be discarded and replaced if:

- The maximum I value is exceeded (according to Table 1)
- The minimum K value falls short (according to Table 1)
- The hook shows signs of cracking
- The hook is deformed or otherwise damaged

Defective hooks must be replaced before using the chain block again.

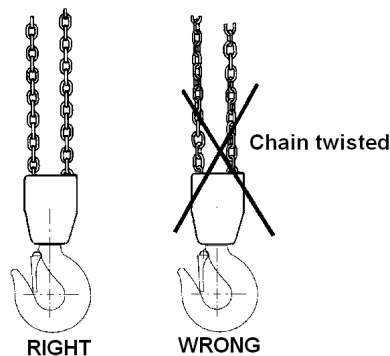

**Fig. 3** The chain must not be twisted

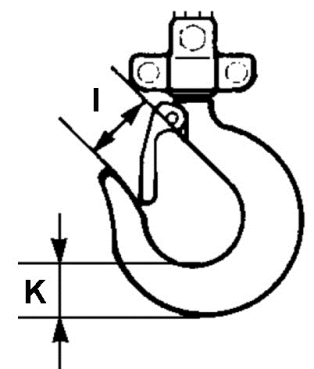

**Fig. 4** Load hook

**Table 1** Load hook

Max. load t	0,25	0,5	1	2	3	5	10	20
Model	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
Dimension I nominal mm	24	25,5	30	38,5	41,5	47	55	84
Dimension I max mm	26,4	28,0	33	42,3	45,5	51,7	60,5	92,4
Dimension K nominal mm	15	19	25	33,5	39	44,5	62	93
Dimension K min mm	13,5	17,1	22,5	30,2	35,1	40,0	55,8	83,7

**Checks on load chain** (see Fig. 5 and Table 2)

Inspect the load chain over its whole length to detect any deformed or otherwise damaged links. Make a check measurement of suspect links. Measure the worn areas Also, every 300 mm (normally), make check measurements of the internal length of 5 links (pitch dimension 5xP – according to Table 2).

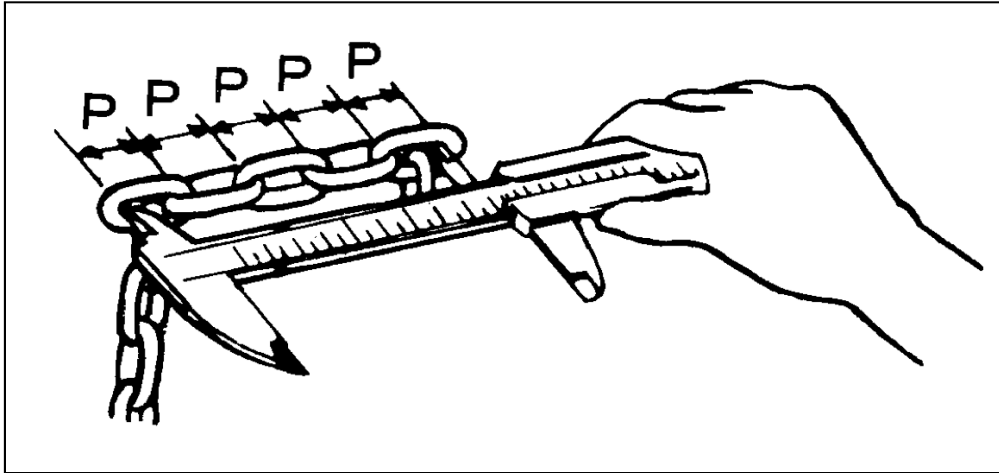


Fig 5 Checking chain dimensions

**Table 2** Load chain

Max. load t	0,25	0,5	1	2	3	5	10	20
Model	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
Link diameter nominal mm	4,0	5,0	6,3	8,0	10,0	9,0	10,0	9,0
Link diameter min. mm	3,6	4,5	5,7	7,2	9,0	8,1	9,0	8,1
Pitch dimension (5xP) nominal mm	60,0	75,0	95,0	120,0	150,0	135,0	150,0	135,0
Pitch dimension (5xP) max. mm	61,8	77,2	98,0	123,5	154,5	139,0	154,5	139,0

The load chain must be discarded and replaced if:

- cracks are detected on any link
- any link is deformed or otherwise damaged
- The minimum value of any link's diameter falls short
- the maximum value of the pitch dimension is exceeded at any point
- the chain is damaged by overheating or has been affected by weld splatter

Load chains must **not** be repaired – they must be replaced by new chain. If it is desired to lengthen the chain, it must be replaced by a new and longer chain.

Replacement of the chain shall be performed professionally by an authorized repairer and the chain must meet the requirements stated in the standard EN 818-7 from the following manufacturers: Chaineries Limousines, Pewag, Thiele or Rud

**Repairs**

The chain block must not be modified. Repairs must be carried out by specialists. Damaged parts must only be replaced with original Powertex spare parts. Order them through your dealer.

**Checklist for periodic checks** (normally yearly – more frequently if necessary)

Daily	Yearly	Inspection items	Inspection method	Note
<b>Labels</b>				
X	X	Rating plate	Visual	If the plate is hard to read - replace it
<b>Function</b>				
X	X	Raising and lowering function	Test without load	A low snapping noise should be audible
-	X	Raising and lowering function	Test with rated weight for min 300 mm	Load chain sprocket and chain work well together. Brake works. Hand pulling on the hand chain feels even and not too heavy
<b>Hooks</b>				
X -	X	Hook opening	Visual Measurements	Looks normal See Fig. 4 and Table 1
X	X	Deformation	Visual	No visible deformation
	X	Hook bearing	Visual	No abnormal play
X -	X	Wear, cracks, deformation and corrosion	Visual Measurements	No visible damage See Fig. 4 and Table 1
	X	Hook bearing	Visual	No abnormal play
<b>Load chain</b>				
X -	X	Pitch	Visual Measurement	Looks normal. Measure in case of doubt See Fig. 5 and Table 2
X -	X	Wear	Visual Measurement	Looks problem-free. Measure in case of doubt See Fig. 5 and Table 2
X	X	Deformation	Visual	No deformation. Measure in case of doubt
X	X	Cracks etc.	Visual	No cracks
X	X	Rust	Visual	No rust
<b>Housing</b>				
X	X	Frame	Visual	No deformation and no rust
X	X	Gearbox	Visual	No deformation
-	X	Gears	Visual after dismantling	No serious wear or fractures
-	X	Load chain sprocket	Visual after dismantling	No serious wear or cracks. No fractures or deformation
-	X	Hand chain sprocket	Visual	No serious wear or cracks. No fractures or deformation
-	X	Bearings	Visual, testing	No damage, smooth running
<b>Screws</b>				
	X	Screws, nuts, rivets, cotters etc.	Visual	Must not be missing. Tighten loose items. Replace as necessary
<b>Brake</b>				
-	X	Brake disk	Visual	Replace if worn
-	X	Brake screw	Visual	No serious wear
-	X	Pawl and ratchet	Visual	Replace worn parts. Carefully lubricate with grease


## POWERTEX Kett-tali PCB-S1 0.25 – 20 tonni Kasutusjuhend (EE)

Lugege kasutusjuhend enne kett-tali kasutamist põhjalikult läbi. Ebasihipärane või vale kasutamine võib põhjustada ohuolukordi!

### Üldised ohutusnõuded

- Enne kasutamise alustamist kontrollige kett-tali korrasolekut. Vt. lehekülg 15, peatükk "Igapäevased kontrollitoimingud".
- Ärge ületage maksimaalset lubatud tõstjõudu.
- Mudelite puhul kuni 1t (WLL) toimib pidurdussüsteem turvaliselt ainult juhul kui koormus on vähemalt 30 kg. Mudelite puhul, mille WLL on suurem kui 1t, peab koormus olema suurem kui 3% lubatud maksimaalsest tõstjõust (WLL)
- Käsitlege kett-tali ettevaatusega. Vältige tõsteseadme loopimist või selle mahakukkumist.
- Ärge kasutage kett-tali keevitustööde teostamiseks läheduses, kus eksisteerib oht selle kahjustamiseks pritsmete või keevitusvooluga.
- Kett-tali ei tohi kasutada inimeste tõstmiseks.

### Tehnilised andmed

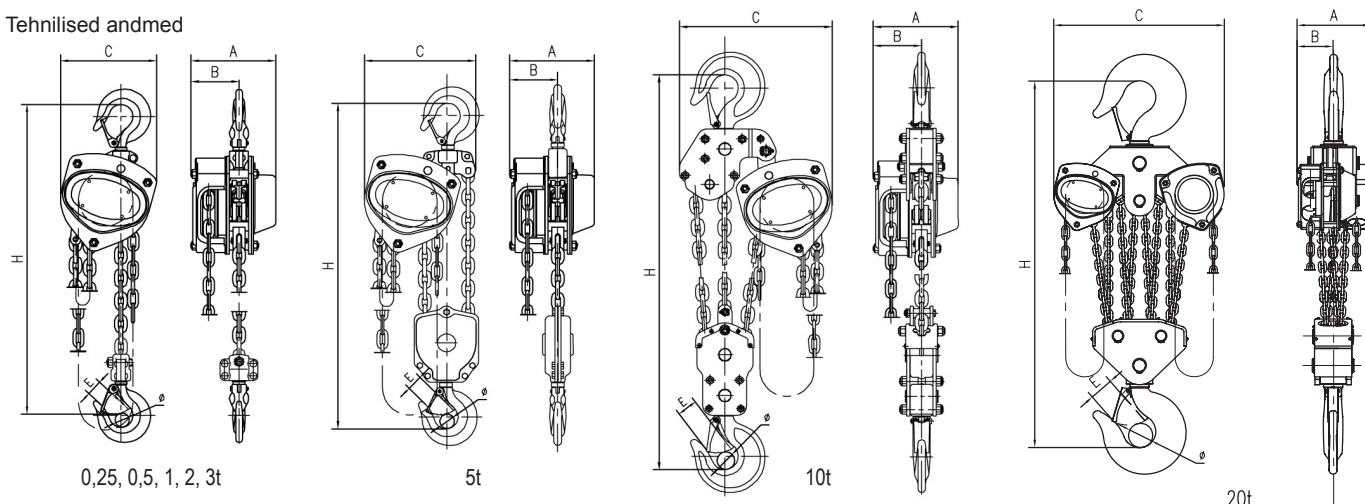

Mudel	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
<b>Maksimumkoormus tonni</b>	<b>0,25</b>	<b>0,5</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>5</b>	<b>10</b>	<b>20</b>	
Standardtõstekõrgus *) m	3	3	3	3	3	3	3	3	3
Tõstetrosside arv	1	1	1	1	1	2	3	8	
Tõmbejõud käsiketile daN (kp)	19	21	29	36	41	40	54	2x40	
Tõstekett	4x12	5x15	6,3x19,1	8x24	10x30	9x27	10x30	9x27	
Mõõde A mm	106	128	142	175	195	183	195	183	
Mõõde B mm	68	75	76	88	95	90	95	90	
Mõõde C mm	108	130	150	185	226	255	355	577	
Mõõde Ø mm	18	20	25	33	36	43	44	110	
Mõõde E mm	20	22	26	35	37	43	47	70	
Mõõde H min. mm	280	280	330	385	435	615	810	1.060	
Kaal standardtõstekõrguse korral kg	6,4	8,9	12	19,5	29,4	36,3	64,1	185	

\*) Käsikett-tali pikkus varieerub vastavalt tõstekõrgusele.

Ohutustegur: 4:1.

Staatilise testi koefitsient: WLL x 1,5

Üldiselt vastavalt ingliskeelsele versioonile EN 13157.

### Kasutamine

Tõstekonks tõuseb ja langeb käsiketi tõmbamisel. Koormus jääb püsima käsiketi vabastamisel – tali on varustatud vastava piduriga, mis raken- dub automaatselt.

### Kett-tali riputamine tõstekohal

Kett-tali võib riputada sobiva kandevõimega tõsteaasa, seekliga, tala- või talakraanale. Kui kett on pingul, peavad mõlemad tõstekonksud verti- kaalsuunal samal joonel asetsema.



**NB!** Tali plokile, konksudele või ketile ei tohi rakendada paindepingeid.

### Tõstmine/langetamine

Kasutage üksnes sobiva kandevõimega tõste- troppe. Veenduge enne tõstmise alustamist, et last ei ole kinnitatud põrand/maapinna külge või mingil muul moel fikseeritud. Kontrollige et tõstekett ripuks vertikaalselt ja ketil ei oleks keerde sees. Ka käsikett peab olema heas seisukorras ning vabalt juurdepääsetav. Lasti tõstmine või langetamine toimub käsiketti soovitud suunas tõmmates.

### Hoiatus:


- Käsiketi tõmbamisel on lubatud kasutada üksnes ühe inimese käejõudu. Kui kett tundub liiga raskena, kasutage suuremat kett-tali või vähendage koormust.
- Veenduge alati, et rippuva lasti all ei seisaks inimesi.
- Ärge astuge rippuvale lastile.
- Ärge tõstke ega langetage nii kaugele, et tõstekonks pörkub vastu tali korpus.
- Kett-tali ei tohi kasutada raskuste lohistamiseks.
- Talile ei tohi rakendada dünaamilisi pinged, mis tekivad näiteks olukorras, kus last kõrgemalt alla visatakse.
- Ärge jätke tali sellel rippuva lastiga järelevalveta.

**Lasti kinnitamine**


Kontrollige enne kasutamist alati tõsteseadmete seisukorda. Lasti vale kinnitamine võib olla väga ohtlik (vt. jooniseid 2 a – 2 e).




**Joon. 2 a**  
Tropp kannab koormuse tõstekonksu otsale

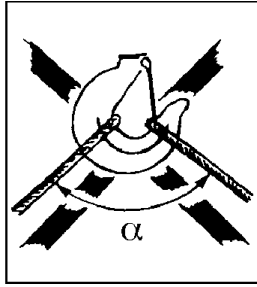


**Joon. 2 b**  
Tropid on liiga suure nurga all!  $\alpha$  max. 60°

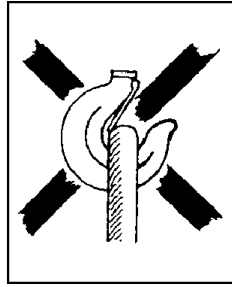

**Joon. 2 c**  
Konksu sulguri fikseerimine on takistatud

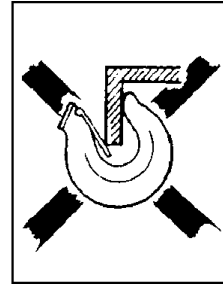

**Joon. 2 d**  
Konksu otsale mõjuvad täiendavad paindepinged

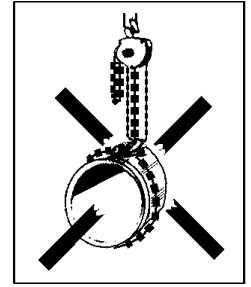

**Joon. 2 e**  
Tõsteketti ei tohi kasutada silmustropina

**Mitmiktõstmine**

Mitmiktõstmisega kaasnevad erilised riskid. Tegemist on olukorraga, kus sama raskuse tõstmiseks kasutatakse korraga kahte või enamat tõstukit. Kehavigastuste ja varalise kahju oht võib tekkida seoses dünaamiliste pingete ja raskuse ebaühtlase jaotumisega, mistõttu mõnel tõstukil tekib ülekoormus. Seetõttu peab selliseid tõstmistöid juhatama pädev isik, kellel on mitmiktõstmise alal varasemaid kogemusi.

Tõstetava eseme kogumass ja raskuse jaotus peavad olema teada või välja arvatud.

Raskuskeskme kindlakstegemine võib olla erinevatel põhjustel raskendatud, mistõttu on keeruline määrata igale kett-tõstukile langevat koormust.

Kui tõstetakse suure massi ja suurte mõõtmetega esemeid ning kõiki tegureid ei ole võimalik täpselt hinnata, tuleb iga kett-tõstuki töökoormuse limiiti (WLL) vähendada vähemalt 25%.

**Igapäevased kontrollitoimingud**

Iga kasutuspäeva järel tuleb kontrollida järgmisi asjaolusid:

- Kas kett-tali on deformeerunud või mingil muul viisil kahjustada saanud? Kas on puuduvaid detaile?
- Kas tali riputuskohal (tõsteaasal, seeklil, siirdevankril jms.) on täheldatav deformatsioone või mingeid muid silmaga nähtavad vigastusi?
- Kas konksud on terved või on mõni konks veninud? Kas konksude lukustuid on korras ja töötavad?
- Puhastage kett-tali ja õlitage tõsteketti vastavalt nõutule.
- Tõstekett peab olema terve ja vigastusteta; st. sellel ei tohi olla kulumise ja deformatsiooni jälgi ega muul viisil vigastatud lülisid.
- Tõsteketti ei tohi olla keerdus ega sõlmes. Kahe või enama tõsteketiga talide puhul tekib kettide keerdumise oht siis, kui alumine konks keeratakse läbi tekkiva aasa – harilikult tekivad sellised olukorrad konksu ümberhaakimisel ühest kohast teise või tali uude asukohta monteerimisel. Vaata joonist 3.
- Käsiketti peab olema heas seisukorras.
- Piduri funktsioneerimine peab toimima tõrgeteta.

Rikete või probleemide korral tuleb tõsteseade ära parandada ning lasta enne kasutusele võtmist spetsialistil üle vaadata.

**Jooksvad hooldustööd – õlitamine**

Õlitage konksu lukustusmehhanisme ja laagreid, töodelge määrdeainega pörk-linki ja -mehhanismi. Määrdeainet tuleb kasutada mõõdukalt ning jälgida, et see ei satuks määrimise käigus pidurikettale. Õlitage ka tõsteketti (tagab keti pikema eluea).

**Perioodilised kontrollid**


Perioodilist kontrolli teostatakse reeglina kord aastas eesmärgiga võimalikud puudused leida ja kõrvaldada. Vajaduse korral (nt. seadme intensiivsel kasutamisel) võib kontrolli teostada sagedamini. Vaata "Kontroll-leht perioodilise kontrolli teostamiseks". Deformatsioonide koheseks tuvastamiseks mõõtkte konkse ja ketti.

**Tõstekonksude kontrollimine** (vaata joonist. 4 ja tabelit 1)


Kõige olulisem on konksu ava l suurus. Selle ava liiga suured mõõtmed tähendavad seda, et konksu üle koormatud või kasutatud liiga kõrgetel temperatuuridel. Selle tagajärjel puudub konksul vajalik kandevõime. On ühtlasi võimalik, et konks on kulunud seoses pikajalise intensiivse kasutamisega on pikalt ja tugevasti kulutada saanud (mõõde K).

Konksud tuleb uutega asendada juhul, kui:

- Mõõtme l maksimumväärtus on ületatud (vastavalt tabelile 1);
- Mõõtme K miinimumväärtus on nõutavast väiksem (vastavalt tabelile 1);
- Konksul võib täheldada pragusid;
- Konks on deformeerunud või muul viisil vigastada saanud.

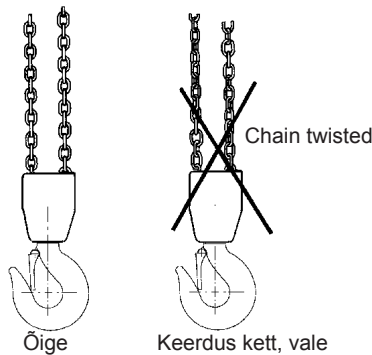

Joonis 3 Kett ei tohi keerdus olla

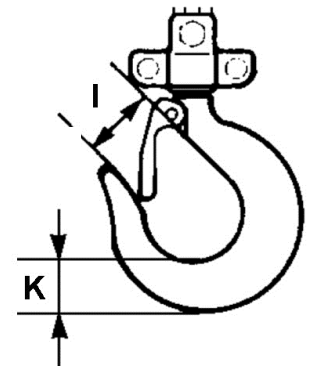

Joonis 4 Tõstekonks


Defektiga konksud tuleb enne kett-tali kasutamist uutega asendada.

**Tabel 1** Tõstekonks

Maksimaalne koormus	0,25	0,5	1	2	3	5	10	20
Mudel	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
Mõõde I nimiväärtus mm	24	25,5	30	38,5	41,5	47	55	84
Mõõde I maksimum mm	26,4	28,0	33	42,3	45,5	51,7	60,5	92,4
Mõõde K nimiväärtus mm	15	19	25	33,5	39	44,5	62	93
Mõõde K min mm	13,5	17,1	22,5	30,2	35,1	40,0	55,8	83,7

**Tõsteketi kontrollimine** (vaata joonist. 5 ja tabelit 2)

Kontrollige tõsteketti kogu selle pikkuse ulatuses, et leida deformeerunud või mingil muul moel vigastada saanud lülisid. Kontrollige kahtlaseid lülisid neid mõõtes. Mõõtke kulunud kohti. Lisaks kontrollige iga 300 mm (reeglina) järel 5 lüli sisemist pikkust (sammu mõõde 5xP - vastavalt tabelile 2).

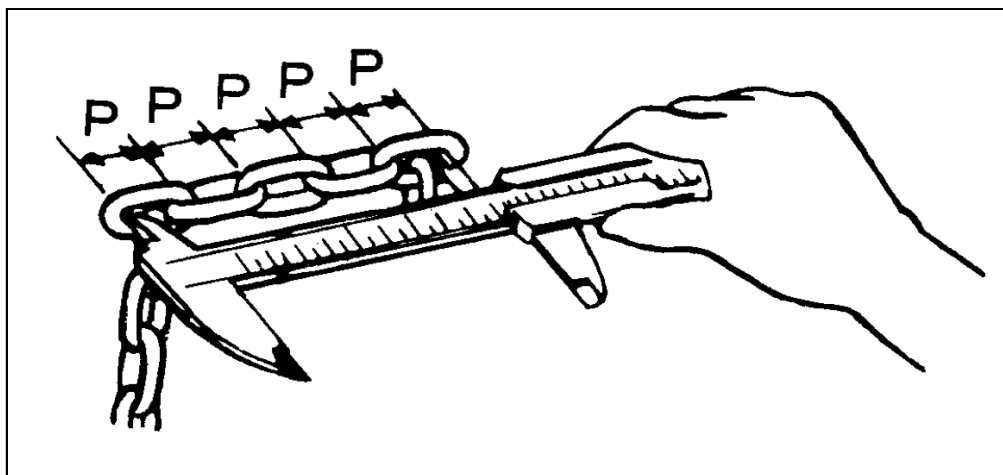

Joonis 5 Keti mõõtmete kontrollimine

**Tabel 2** Tõstekett

Maksimumkoormus tonni	0,25	0,5	1	2	3	5	10	20
Mudel	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1	PCB-S1
Lüli läbimõõt, nimiväärtus mm	4,0	5,0	6,3	8,0	10,0	9,0	10,0	9,0
Lüli läbimõõt, miinimumväärtus mm	3,6	4,5	5,7	7,2	9,0	8,1	9,0	8,1
Sammu pikkus (5xP) nimiväärtus mm	60,0	75,0	95,0	120,0	150,0	135,0	150,0	135,0
Sammu pikkus (5xP) maksimumväärtus mm	61,8	77,2	98,0	123,5	154,5	139,0	154,5	139,0

Tõstekett tuleb minema visata ja uuega asendada järgmistel juhtudel:

- mõnes ketilülis on pragusid;
- mõni ketilüli on deformeerunud või mingil muul moel vigastada saanud;
- mõne ketilüli läbimõõt on lubatust väiksem;
- keti sammu maksimumväärtused on mõnes punktis ületatud;
- kett on saanud kahjustada tänu ülekuumenemisele või kaetud keevituspritsmetega.

Tõstekette **ei tohi** parandada – need tuleb uue ketiga välja vahetada. Kui soovite ketti pikendada, tuleb see asendada uue ja pikema ketiga.

Tõsteketi vahetust tohib teha ainult volitatud esindaja. Tõstekett peab vastama standardile EN 818-7 järgmistelt tootjatelt: Chaineries Limousines, Pewag, Thiele or Rud.

**Parandustööd**

Kett-tali ei tohi ümber ehitada. Remonditöid võivad sooritada üksnes spetsialistid. Vigastatud osade asendamiseks tohib kasutada üksnes Power-tex originaalvaruosi. Neid saate tellida oma talide edasimüüja vahendusel.



**Kontroll-leht perioodilise kontrolli teostamiseks** (reeglina kord aastas – vajadusel sagedamini)


Kord päevas	Kord aastas	Kontrollitavad aspektid	Kontrollimeetod	Kommentaariid
<b>Etiketid</b>				
X	X	Andmeplaat	Visuaalne	Kui andmeplaati on raske lugeda – asendage see uuega.
<b>Toimivus</b>				
X	X	Töstmis- ja langetamisfunktsioon	Koormuseta testimine	Selgesti peab olema kuulda madalat klõpsuvat heli.
-	X	Töstmis- ja langetamisfunktsioon	Testimine nimikoormusega minimaalselt 300 mm tõstega	Tõsteketi ketiratas ja kett peavad tõrgeteta koos toimima. Pidur töötab. Käsiketi tõmbamine on sujuv on ning ei tundu liiga raskena.
<b>Konksud</b>				
X	X	Konksu avanevus	Visuaalne	Näeb normaalne välja
-			Mõõtmine	Vaata joonist. 4 ja tabelit 1.
X	X	Deformatsioon	Visuaalne	Nähtavaid deformatsioone pole.
	X	Konksu laagrid	Visuaalne	Puudub normist erinev lõtk.
X	X	Kulumisjäljed, mõrad, deformatsioon ja korrosioon	Visuaalne	Nähtavad vigastused puuduvad.
-			Mõõtmine	Vaata joonist. 4 ja tabelit 1.
	X	Konksu laagrid	Visuaalne	Puudub normist erinev lõtk.
<b>Tõstekett</b>				
X	X	Samm	Visuaalne	Näeb normaalne välja. Kahtluste korral teostage mõõtmised.
-			Mõõtmine	Vaata joonist 5 ja tabelit 2.
X	X	Kulumine	Visuaalne	Näib probleemideta. Kahtluste korral teostage mõõtmised.
-			Mõõtmine	Vaata joonist. 5 ja tabelit 2.
X	X	Deformatsioon	Visuaalne	Puuduvad deformatsioonid. Kahtluste korral teostage mõõtmised
X	X	Praod jms	Visuaalne	Praod puuduvad
X	X	Rooste	Visuaalne	Roostejälgi pole
<b>Korpus</b>				
X	X	Karkass	Visuaalne	Puuduvad deformatsioonid ja roostejäljed.
X	X	Käigukast	Visuaalne	Puuduvad deformatsioonid.
-	X	Ülekanne	Visuaalne, pärast demonteerimist	Puuduvad tugevad kulumisjäljed või mõrad.
-	X	Tõsteketi ketiratas	Visuaalne, pärast demonteerimist	Puuduvad tugevad kulumisjäljed või praod. Puuduvad mõrad või deformatsioonid.
-	X	Käsiketi ketiratas	Visuaalne	Puuduvad tugevad kulumisjäljed või praod. Puuduvad mõrad või deformatsioonid.
-	X	Laagrid	Visuaalne, testimine	Puuduvad vigastused, liiguvad sujuvalt.
<b>Kruvid</b>				
	X	Kruvid, mutrid, needid, tihvtid jms.	Visuaalne	Ei tohi olla puuduvaid komponente. Lõtvunte pingutamine. Vajadusel vahetada.
<b>Pidur</b>				
-	X	Piduriketask	Visuaalne	Asendage kulunud detail uuega.
-	X	Pidurikruvi	Visuaalne	Puuduvad tugevad kulumisjäljed.
-	X	Põrklink ja –ratas	Visuaalne	Asendage kulunud osad uutega. Määrige ettevaatlikult.

## POWERTEX Chain Block PCB-S1 – Spare parts 0,25 t

When ordering spare parts, specify model, WLL, part number and the quantity needed.

When ordering chain, also specify lifting height.

If the load chain has been damaged or worn out the load sheave probably has to be replaced.

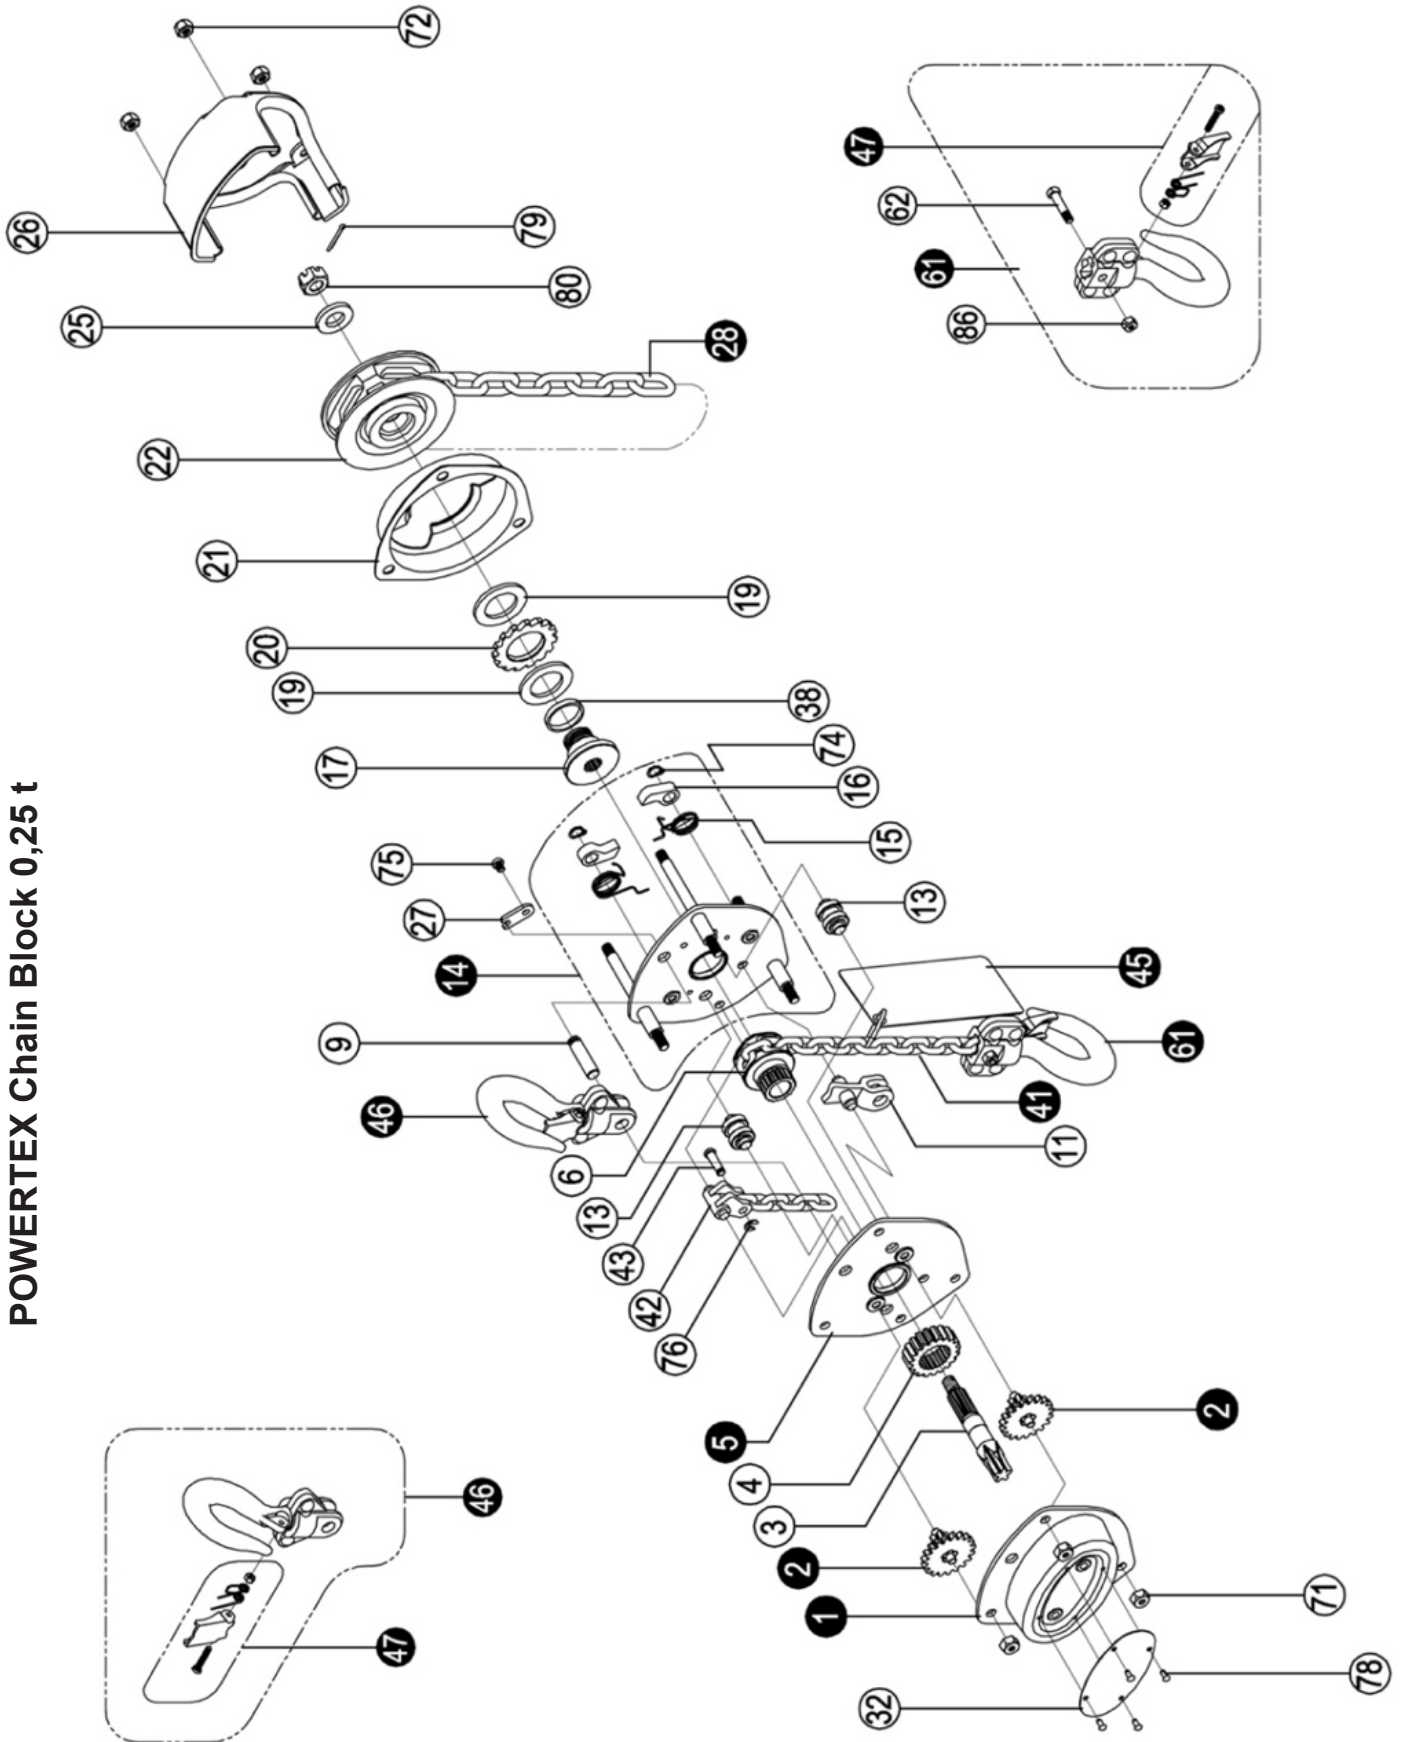

POWERTEX Chain Block 0,25 t

**Spare parts list 0,25 t**


Pos	Description	0,25 t
1	Gear cover assy	16.10PCB1411001
2	Disc gear assy	16.10PCB1411002
3	Drive shaft	16.10PCB1411003
4	Splined gear	16.10PCB1411004
5	Right side plate assy	16.10PCB1411005
6	Load chain sprocket	16.10PCB1411006
9	Top hook shaft	16.10PCB1411009
11	Chain stripper	16.10PCB1411011
13	Guide roller	16.10PCB1411013
14	Left side plate assy	16.10PCB1411014
15	Pawl spring	16.10PCB1411015
16	Pawl	16.10PCB1411016
17	Brake seat	16.10PCB1411017
19	Friction plate	16.10PCB1411019
20	Ratchet wheel	16.10PCB1411020
21	Brake cover	16.10PCB1411021
22	Hand chain wheel	16.10PCB1411022
25	Washer	16.10PCB1411025
26	Hand chain cover	16.10PCB1411026
27	Positioned plate	16.10PCB1411027
28	Hand Chain	16.10PCB1411028
32	Name plate	16.10PCB1411032
41	Load Chain	16.10PCB1411041
42	End anchor	16.10PCB1411042
43	End anchor pin	16.10PCB1411043
45	Warning plate assy	16.10PCB1411045
46	Top hook assy	16.10PCB1411046
47	Safety latch assy	16.10PCB1411047
61	Bottom hook assy	16.10PCB1411061
62	Bottom hook pin	16.10PCB1411062
71	Metal lock nut	16.10PCB1411071
72	Metal lock nut	16.10PCB1411072
74	Circlip	16.10PCB1411074
75	Cross head screw	16.10PCB1411075
76	Split retainer	16.10PCB1411076
78	Name plate	16.10PCB1411078
79	Split pin	16.10PCB1411079
80	Hexagon nut	16.10PCB1411080

## POWERTEX Chain Block PCB-S1 – Spare parts 0,5 – 5 t

When ordering spare parts, specify model, WLL, part number and the quantity needed.

When ordering chain, also specify lifting height.

If the load chain has been damaged or worn out the load sheave probably has to be replaced

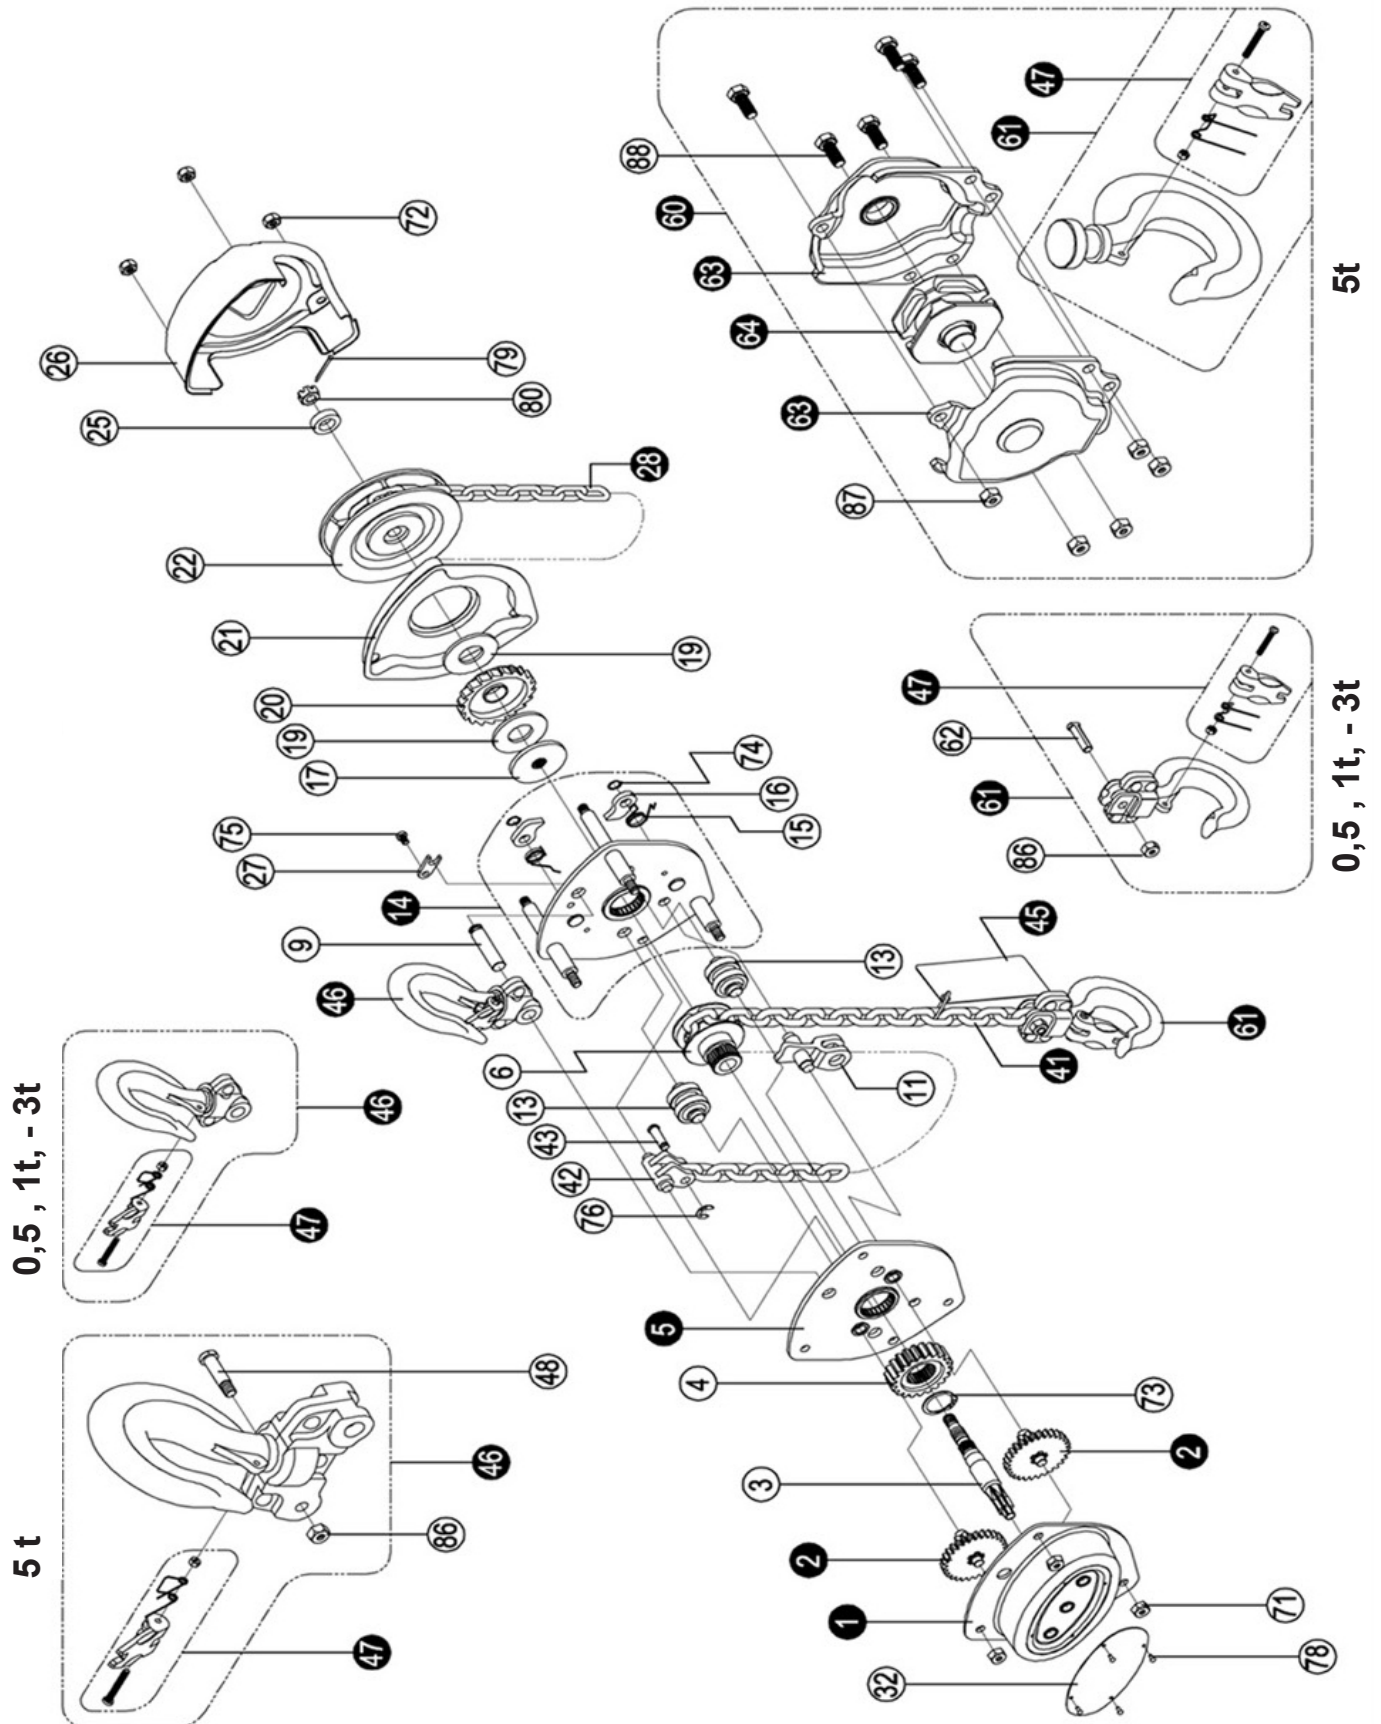



**Spare parts list 0,5 – 5 t**

Pos	Description	0,5 t	1 t	2 t	3 t	5 t
1	Gear cover assy	16.10PCB1412001	16.10PCB1414001	16.10PCB1416001	16.10PCB1417001	16.10PCB1419001
2	Disc gear assy	16.10PCB1412002	16.10PCB1414002	16.10PCB1416002	16.10PCB1417002	16.10PCB1419002
3	Drive shaft	16.10PCB1412003	16.10PCB1414003	16.10PCB1416003	16.10PCB1417003	16.10PCB1419003
4	Splined gear	16.10PCB1412004	16.10PCB1414004	16.10PCB1416004	16.10PCB1417004	16.10PCB1419004
5	Right side plate assy	16.10PCB1412005	16.10PCB1414005	16.10PCB1416005	16.10PCB1417005	16.10PCB1419005
6	Load chain sprocket	16.10PCB1412006	16.10PCB1414006	16.10PCB1416006	16.10PCB1417006	16.10PCB1419006
9	Top hook shaft	16.10PCB1412009	16.10PCB1414009	16.10PCB1416009	16.10PCB1417009	16.10PCB1419009
11	Chain stripper	16.10PCB1412011	16.10PCB1414011	16.10PCB1416011	16.10PCB1417011	16.10PCB1419011
13	Guide roller	16.10PCB1412013	16.10PCB1414013	16.10PCB1416013	16.10PCB1417013	16.10PCB1419013
14	Left side plate assy	16.10PCB1412014	16.10PCB1414014	16.10PCB1416014	16.10PCB1417014	16.10PCB1419014
15	Pawl spring	16.10PCB1412015	16.10PCB1414015	16.10PCB1416015	16.10PCB1417015	16.10PCB1419015
16	Pawl	16.10PCB1412016	16.10PCB1414016	16.10PCB1416016	16.10PCB1417016	16.10PCB1419016
17	Brake seat	16.10PCB1412017	16.10PCB1414017	16.10PCB1416017	16.10PCB1417017	16.10PCB1419017
19	Friction plate	16.10PCB1412019	16.10PCB1414019	16.10PCB1416019	16.10PCB1417019	16.10PCB1419019
20	Ratchet wheel	16.10PCB1412020	16.10PCB1414020	16.10PCB1416020	16.10PCB1417020	16.10PCB1419020
21	Brake cover	16.10PCB1412021	16.10PCB1414021	16.10PCB1416021	16.10PCB1417021	16.10PCB1419021
22	Hand chain wheel	16.10PCB1412022	16.10PCB1414022	16.10PCB1416022	16.10PCB1417022	16.10PCB1419022
25	Washer	16.10PCB1412025	16.10PCB1414025	16.10PCB1416025	16.10PCB1417025	16.10PCB1419025
26	Hand chain cover	16.10PCB1412026	16.10PCB1414026	16.10PCB1416026	16.10PCB1417026	16.10PCB1419026
27	Positioned plate	16.10PCB1412027	16.10PCB1414027	16.10PCB1416027	16.10PCB1417027	16.10PCB1419027
28	Hand Chain	16.10PCB1412028	16.10PCB1414028	16.10PCB1416028	16.10PCB1417028	16.10PCB1419028
32	Name plate	16.10PCB1412032	16.10PCB1414032	16.10PCB1416032	16.10PCB1417032	16.10PCB1419032
41	Load Chain	16.10PCB1412041	16.10PCB1414041	16.10PCB1416041	16.10PCB1417041	16.10PCB1419041
42	End anchor	16.10PCB1412042	16.10PCB1414042	16.10PCB1416042	16.10PCB1417042	16.10PCB1419042
43	End anchor pin	16.10PCB1412043	16.10PCB1414043	16.10PCB1416043	16.10PCB1417043	16.10PCB1419043
45	Warning plate assy	16.10PCB1412045	16.10PCB1414045	16.10PCB1416045	16.10PCB1417045	16.10PCB1419045
46	Top hook assy	16.10PCB1412046	16.10PCB1414046	16.10PCB1416046	16.10PCB1417046	16.10PCB1419046
47	Safety latch assy	16.10PCB1412047	16.10PCB1414047	16.10PCB1416047	16.10PCB1417047	16.10PCB1419047
48	Top hook pin	-	-	-	-	16.10PCB1419048
60	Bottom hook assy	-	-	-	-	16.10PCB1419060
61	Bottom hook assy	16.10PCB1412061	16.10PCB1414061	16.10PCB1416061	16.10PCB1417061	16.10PCB1419061
62	Bottom hook pin	16.10PCB1412062	16.10PCB1414062	16.10PCB1416062	16.10PCB1417062	-
63	Bottom hook connector assy	-	-	-	-	16.10PCB1419063
64	Idler sheave assy	-	-	-	-	16.10PCB1419064
71	Metal lock nut	16.10PCB1412071	16.10PCB1414071	16.10PCB1416071	16.10PCB1417071	16.10PCB1419071
72	Metal lock nut	16.10PCB1412072	16.10PCB1414072	16.10PCB1416072	16.10PCB1417072	16.10PCB1419072
73	Circlip	16.10PCB1412073	16.10PCB1414073	16.10PCB1416073	16.10PCB1417073	16.10PCB1419073
74	Circlip	16.10PCB1412074	16.10PCB1414074	16.10PCB1416074	16.10PCB1417074	16.10PCB1419074
75	Cross head screw	16.10PCB1412075	16.10PCB1414075	16.10PCB1416075	16.10PCB1417075	16.10PCB1419075
76	Split retainer	16.10PCB1412076	16.10PCB1414076	16.10PCB1416076	16.10PCB1417076	16.10PCB1419076
78	Name plate	16.10PCB1412078	16.10PCB1414078	16.10PCB1416078	16.10PCB1417078	16.10PCB1419078
79	Split pin	16.10PCB1412079	16.10PCB1414079	16.10PCB1416079	16.10PCB1417079	16.10PCB1419079
80	Hexagon nut	16.10PCB1412080	16.10PCB1414080	16.10PCB1416080	16.10PCB1417080	16.10PCB1419080
86	Metal lock nut	16.10PCB1412086	16.10PCB1414086	16.10PCB1416086	16.10PCB1417086	16.10PCB1419086
87	Metal lock nut	16.10PCB1412087	16.10PCB1414087	16.10PCB1416087	16.10PCB1417087	16.10PCB1419087
88	Bolt M10x25	16.10PCB1412088	16.10PCB1414088	16.10PCB1416088	16.10PCB1417088	16.10PCB1419088


## POWERTEX Chain Block PCB-S1 – Spare parts 10 t

When ordering spare parts, specify model, WLL, part number and the quantity needed.

When ordering chain, also specify lifting height.

If the load chain has been damaged or worn out the load sheave probably has to be replaced.

### POWERTEX Chain Block 10 t

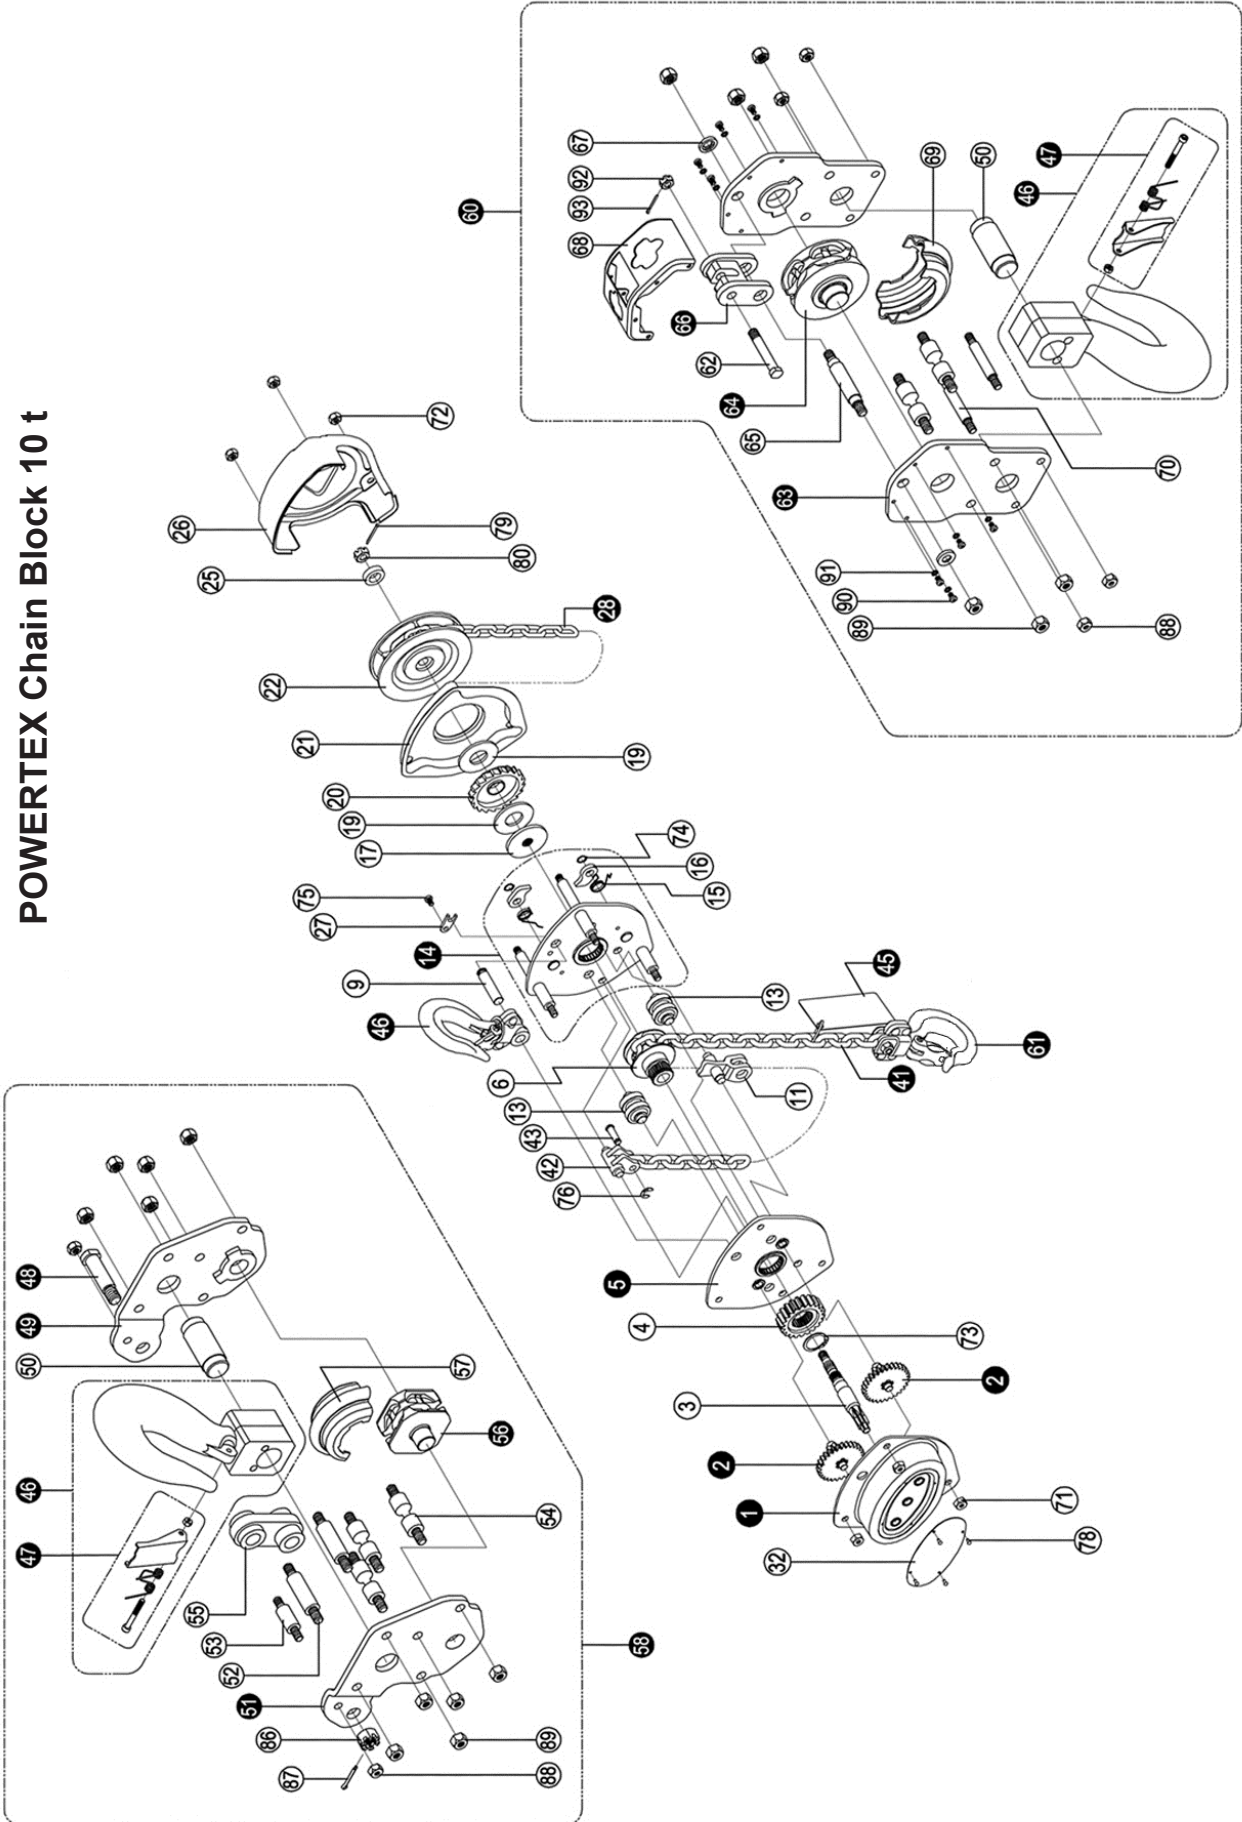

**Spare parts list 10 t**


Pos	Description	10 t	Pos	Description	10 t
1	Gear cover assy	16.10PCB1423001	54	Stay bolt B	16.10PCB1423054
2	Disc gear assy	16.10PCB1423002	55	Suspension plate	16.10PCB1423055
3	Drive shaft	16.10PCB1423003	56	Idler sheave assy	16.10PCB1423056
4	Splined gear	16.10PCB1423004	57	Protection cover	16.10PCB1423057
5	Right side plate assy	16.10PCB1423005	58	Top hook assy	16.10PCB1423058
6	Load chain sprocket	16.10PCB1423006	60	Bottom hook assy	16.10PCB1423060
9	Top hook shaft	16.10PCB1423009	62	Bottom hook pin	16.10PCB1423062
11	Chain stripper	16.10PCB1423011	63	Hook plate	16.10PCB1423063
13	Guide roller	16.10PCB1423013	64	Bottom idler sheave assy	16.10PCB1423064
14	Left side plate assy	16.10PCB1423014	65	Shaft	16.10PCB1423065
15	Pawl spring	16.10PCB1423015	66	Plate	16.10PCB1423066
16	Pawl	16.10PCB1423016	67	Washer	16.10PCB1423067
17	Brake seat	16.10PCB1423017	68	Protection cover	16.10PCB1423068
19	Friction plate	16.10PCB1423019	69	Cover	16.10PCB1423069
20	Ratchet wheel	16.10PCB1423020	70	Bolt	16.10PCB1423070
21	Brake cover	16.10PCB1423021	71	Metal lock nut	16.10PCB1423071
22	Hand chain wheel	16.10PCB1423022	72	Metal lock nut	16.10PCB1423072
25	Washer	16.10PCB1423025	73	Circlip	16.10PCB1423073
26	Hand chain cover	16.10PCB1423026	74	Circlip	16.10PCB1423074
27	Positioned plate	16.10PCB1423027	75	Cross head screw	16.10PCB1423075
28	Hand chain	16.10PCB1423028	76	Split retainer	16.10PCB1423076
32	Name plate	16.10PCB1423032	78	Name plate	16.10PCB1423078
41	Load chain	16.10PCB1423041	79	Split pin	16.10PCB1423079
42	End anchor	16.10PCB1423042	80	Hexagon nut	16.10PCB1423080
43	End anchor pin	16.10PCB1423043	86	Hexagon recess nut	16.10PCB1423086
45	Warning plate assy	16.10PCB1423045	87	Split pin	16.10PCB1423087
46	Top hook assy	16.10PCB1423046	88	Metal lock nut	16.10PCB1423088
47	Safety latch assy	16.10PCB1423047	89	Metal lock nut	16.10PCB1423089
48	Top hook pin	16.10PCB1423048	90	Cross head screw	16.10PCB1423090
49	Plate (right)	16.10PCB1423049	91	Light spring washer	16.10PCB1423091
50	Shaft	16.10PCB1423050	92	Hexagon recess nut	16.10PCB1423092
51	Plate (left)	16.10PCB1423051	93	Split pin	16.10PCB1423093
52	Stay bolt A	16.10PCB1423052			
53	Short bolt	16.10PCB1423053			

## POWERTEX Chain Block PCB-S1 – Spare parts 20 t

When ordering spare parts, specify model, WLL, part number and the quantity needed.

When ordering chain, also specify lifting height.

If the load chain has been damaged or worn out the load sheave probably has to be replaced.

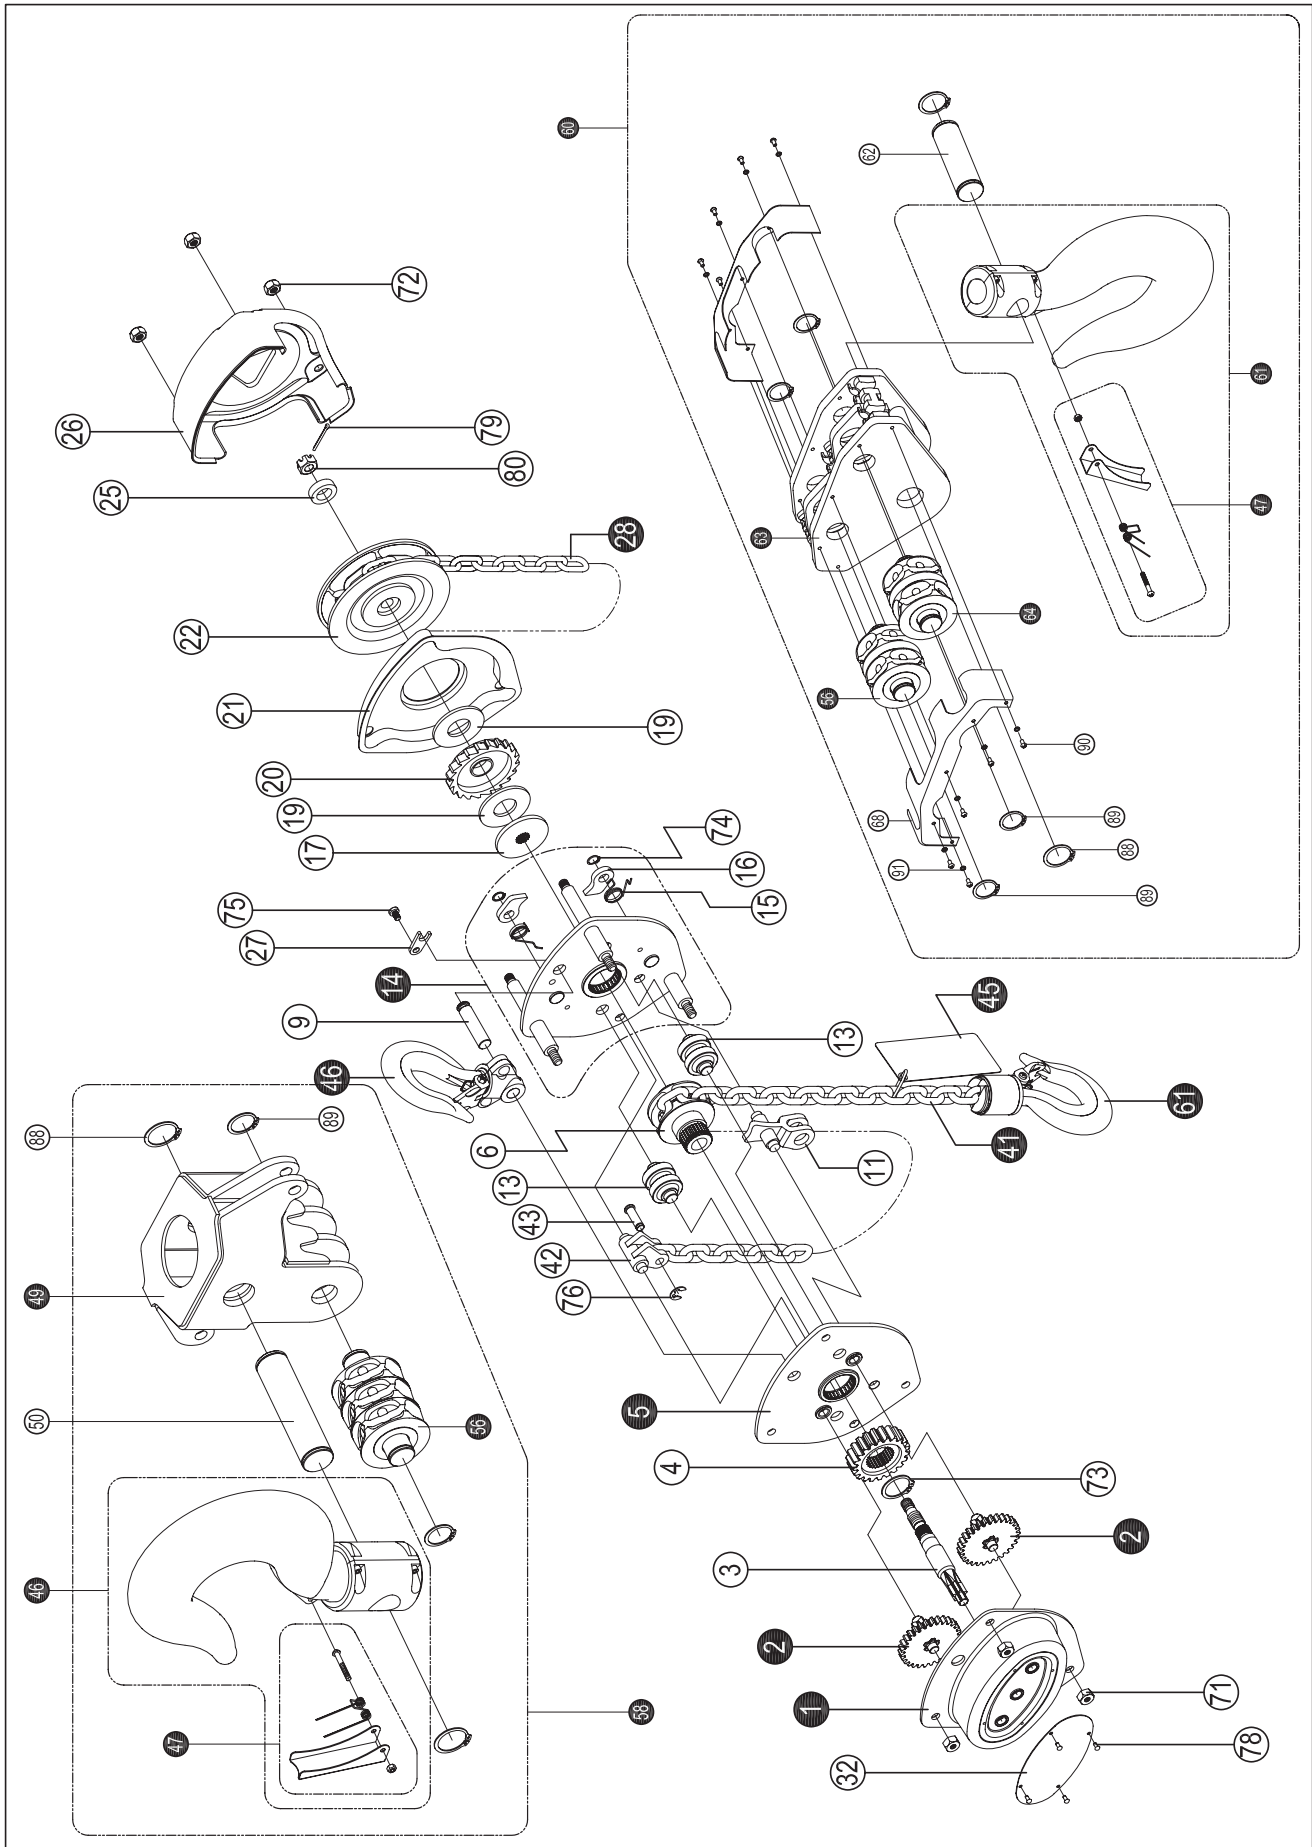



**Spare parts list 20 t**

<b>Pos</b>	<b>Description</b>	<b>20 t</b>
1	Gear cover assy	16.10PCB1427001
2	Disc gear assy	16.10PCB1427002
3	Drive shaft	16.10PCB1427003
4	Splined gear	16.10PCB1427004
5	Right side plate assy	16.10PCB1427005
6	Load chain sprocket	16.10PCB1427006
9	Top hook shaft	16.10PCB1427009
11	Chain stripper	16.10PCB1427011
13	Guide roller	16.10PCB1427013
14	Left side plate assy	16.10PCB1427014
15	Pawl spring	16.10PCB1427015
16	Pawl	16.10PCB1427016
17	Brake seat	16.10PCB1427017
19	Friction plate	16.10PCB1427019
20	Ratchet wheel	16.10PCB1427020
21	Brake cover	16.10PCB1427021
22	Hand chain wheel	16.10PCB1427022
25	Washer	16.10PCB1427025
26	Hand chain cover	16.10PCB1427026
27	Positioned plate	16.10PCB1427027
28	Hand chain 5x23.7 mm	16.10PCB1427028
32	Name plate	16.10PCB1427032
41	Load chain 9x27 mm	16.10PCB1427041
42	End anchor	16.10PCB1427042
43	End anchor pin	16.10PCB1427043
46	Hook assy	16.10PCB1427046
47	Safety latch assy	16.10PCB1427047
49	Beam for top hook	16.10PCB1427049
50	Shaft for top hook	16.10PCB1427050
51	Plate (left)	16.10PCB1427051
52	Stay bolt A	16.10PCB1427052
53	Short bolt	16.10PCB1427053
56	Idler sheave assy	16.10PCB1427056
58	Top hook assy	16.10PCB1427058
60	Bottom hook assy	16.10PCB1427060
61	Hook assy	16.10PCB1427062
63	Bottom hook connector assy	16.10PCB1427063
64	Idler sheave assy for bottom hook	16.10PCB1427064
68	Protection cover	16.10PCB1427068
88	External circlips	16.10PCB1427088
89	External circlips	16.10PCB1427089
90	Cross recessed countersunk head screws	16.10PCB1427090
91	Light spring washer	16.10PCB1427091



## CERTEX Lifting KnowHow app

Download The Lifting KnowHow app'en from the App Store / Google play!

The App has the following features:

- Load charts for different types of lifting slings
- Protractor for measuring sling angles
- Instructions for safe use of a selection of lifting gear
- Built-in gps function that finds the Lifting Solutions Group office closest to your position.
- And a lot more.

The Lifting KnowHow is a unique knowledge transfer programme.



## CertMax+

The CertMax+ system is a unique leading edge certification management system which is ideal for managing a single asset or large equipment portfolio across multiple sites. Designed by the Lifting Solutions Group, to deliver optimum asset integrity, quality assurance and traceability, the system also improves safety and risk management levels.



## Marking

The POWERTEX Chain Block is equipped with a RFID (Radio-Frequency Identification) tag, which is a small electronic device, that consist of a small chip and an antenna. It provides a unique identifier for the block.

The POWERTEX Chain Block is **CE** marked

Standard: EN 13157



## Warning tag

The warning tag shows some specific and important situations, in which you must pay special attention, when using POWERTEX Chain Blocks and Lever Hoists.



## User Manuals

You can always find the valid and updated User Manuals on the web. The manual is updated continuously and valid only in the latest version.

**NB!** The English version is the Original instruction.


The manual is available as a download under the following link:  
[www.powertex-products.com/manuals](http://www.powertex-products.com/manuals)



**POWERTEX**



The Lifting KnowHow

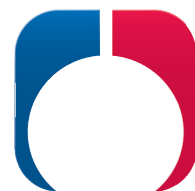

[www.powertex-products.com](http://www.powertex-products.com)